



Controller Setup


Elitech Refulgence




Set Button-
Enters setting mode



Reset/Exit Button-
Exits Setting mode

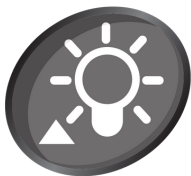

Up Arrow-
Scrolls Temperature
up

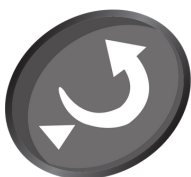

Down Arrow-
Scrolls Temperature
down



Flashing Snowflake

Unit calling for cooling,
waiting for 2 min time delay
to elapse

Steady Snowflake

Unit is in cooling run mode

To adjust temperature set point:

1. Press and hold SET for 5 seconds
2. "St" will appear, press SET
3. Using Up Arrow and Down Arrow select desired set temperature.
4. Press SET to save change
5. Press RESET to exit setting